

Fiberdeck[®]

IDEAL

Installation guide to be read carefully before starting the work. Failure to comply with these installation instructions will void the warranty.

TOOLS :



1. Storage:

IDEAL WPC fence slats must be stored on a flat surface so that they do not deform. The boards must be stored on site for 48 hours before installation.

2. Wind resistance:

In order to be able to withstand winds of 120 km/h, the maximum height to be respected on the fence is 1.2 m.

3. Gates:

If the fence is equipped with a gate, the installation of the gate must be started first.


4. Stripes:

The structure of the fence is made of powder-coated aluminium. Although very resistant, this material can scratch permanently if handled without care.


5. Deformation of the slats:

The aluminium slats must all be fixed with stainless steel screws. WPC slats must never be screwed down to allow them to expand under the effect of temperature variations (expansion of 1 mm/m).

IDEAL FENCE COMPONENTS

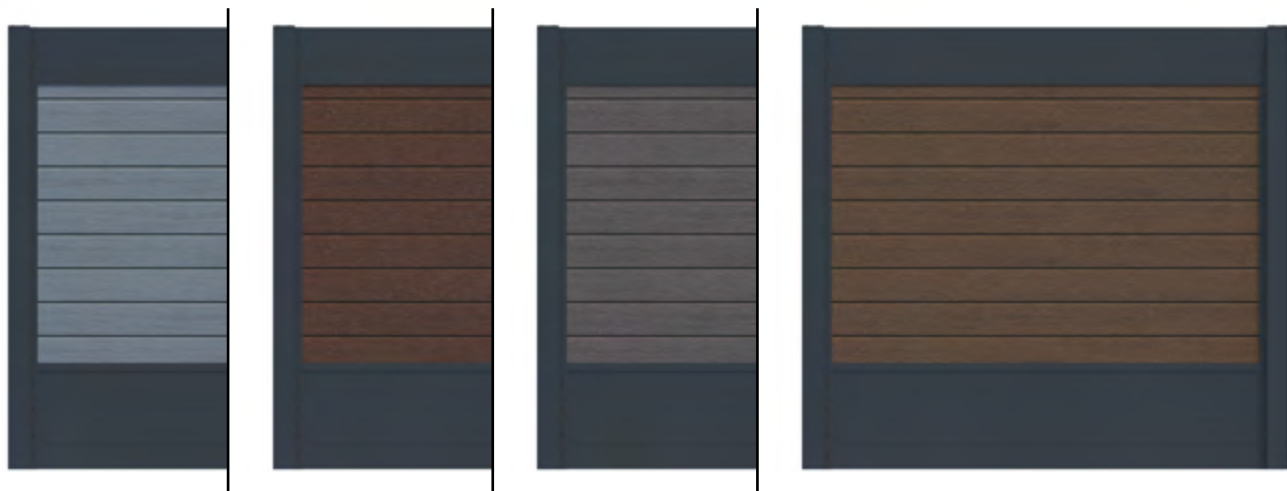


IDEAL - type A

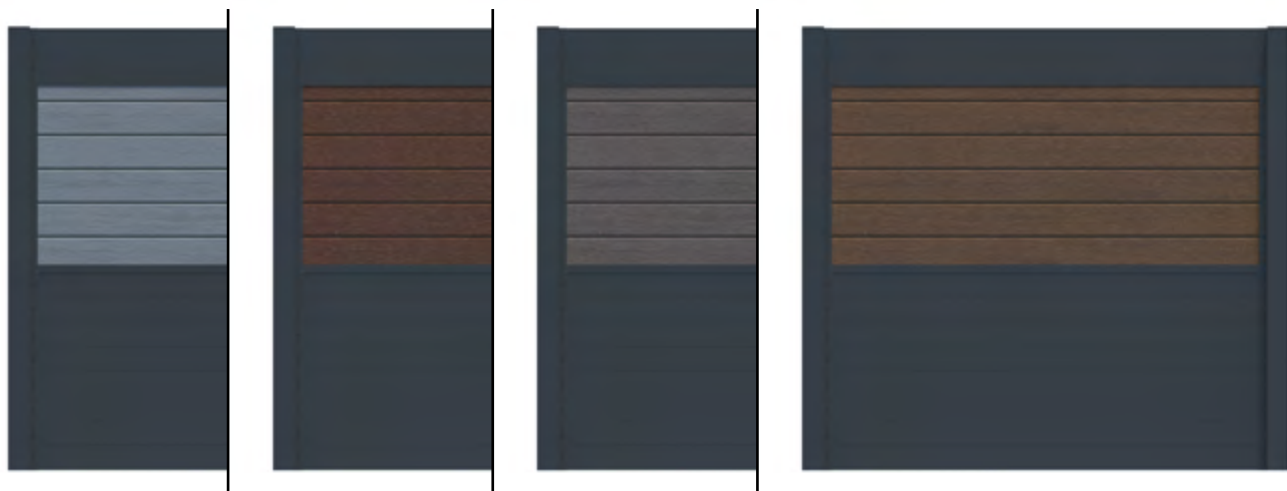







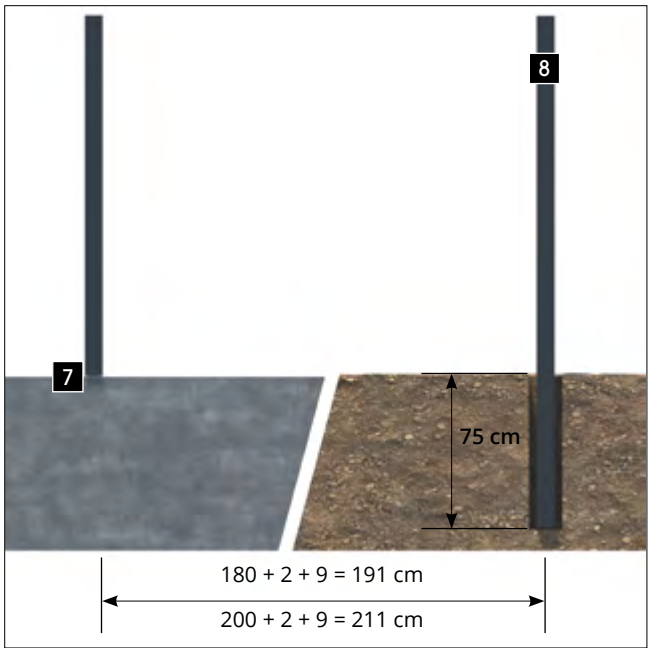


IDEAL - type B



IDEAL - type D



		RAL 7016
1		1233
2 2A		DIVERS 1066/1067
3		1206 1208
4		1200 1202
5		1211 1213
6		1222 1225
7		1231
8		1230/1229
		1064/1065

INSTALLATION STEPS

